



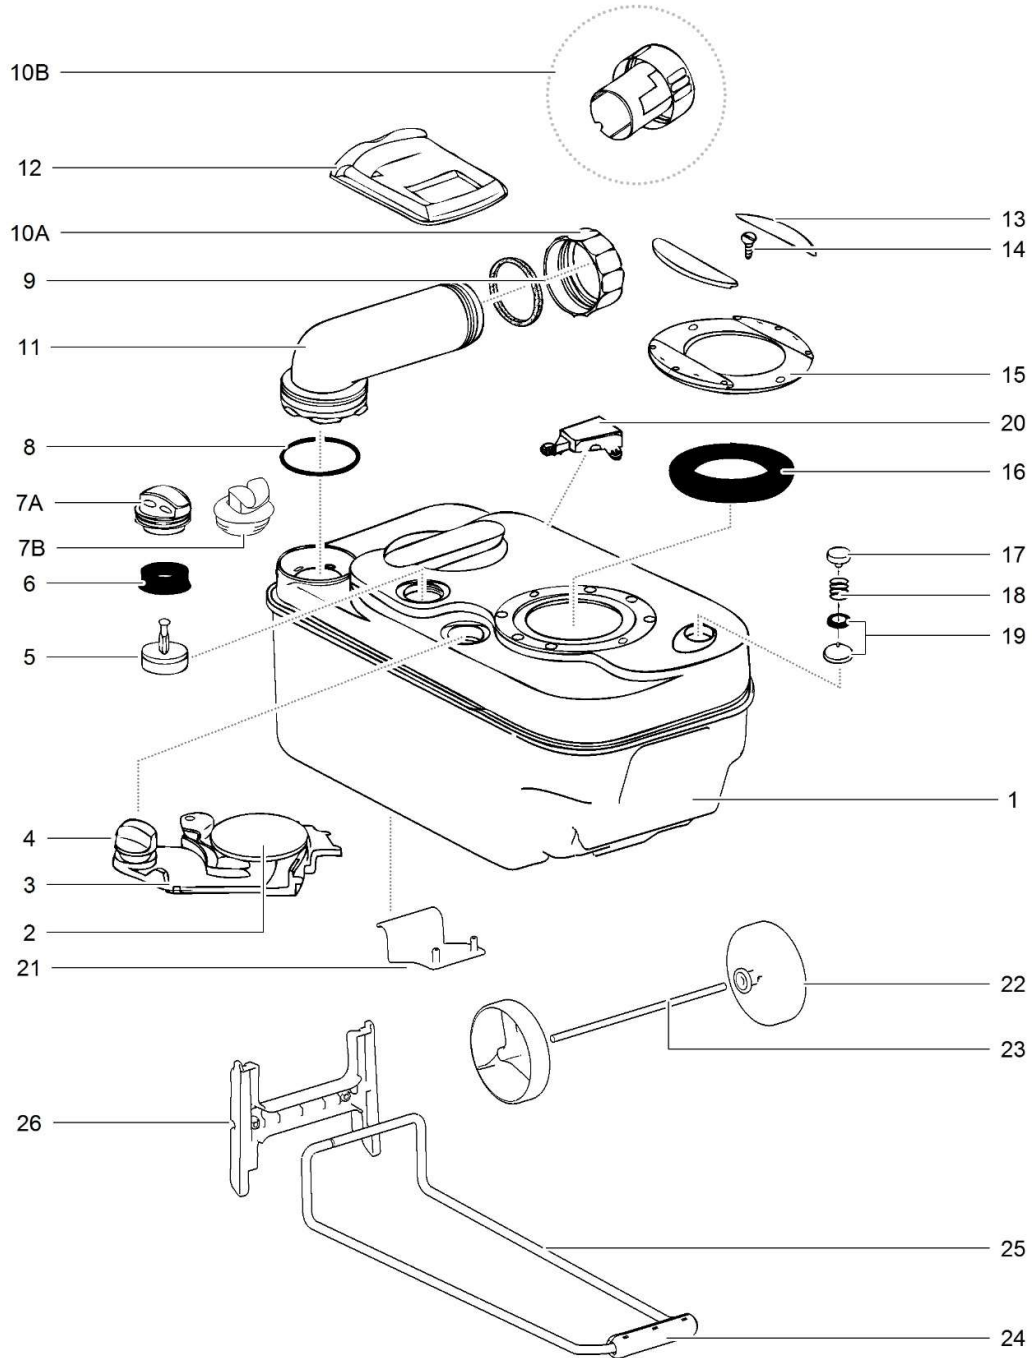

		Spare part number	Spare part number	Spare part number	Colours available
1	Waste-holding tank				
2	Blade	23847			
3	Blade arm				
4	Blade opener	23743			78
5	Foam		23722		74
6	Seal automatic vent	21528			
7A	Upper automatic vent				
7B	Upper automatic vent outside vent			23788 <i>for outside vent version</i>	74
8	O-ring	16195			
9	Cap seal		16384		
10A	Dump cap			16196	74, 78
10B	Measuring cup		25810		
11	Pour out spout				
12	Sliding cover	21333			74
13	Screw cover				
14	Screw				
15	Seal cover				
16	Lip seal	23721			
17	Vent button				
18	Spring		07524		78
19	Seal retainer				
20	Floatarm	23726			
21	Tank lock clip	23849			78
22	Wheels 2X				
23	Axis		200640		142
24	Grip transport handle	200641			74
25	Transport handle		200642		
26	Transport bracket		200644		74
	Waste-holding tank complete <i>including sliding cover, wheels and handle</i>		200636	200637 <i>for outside vent version</i>	74

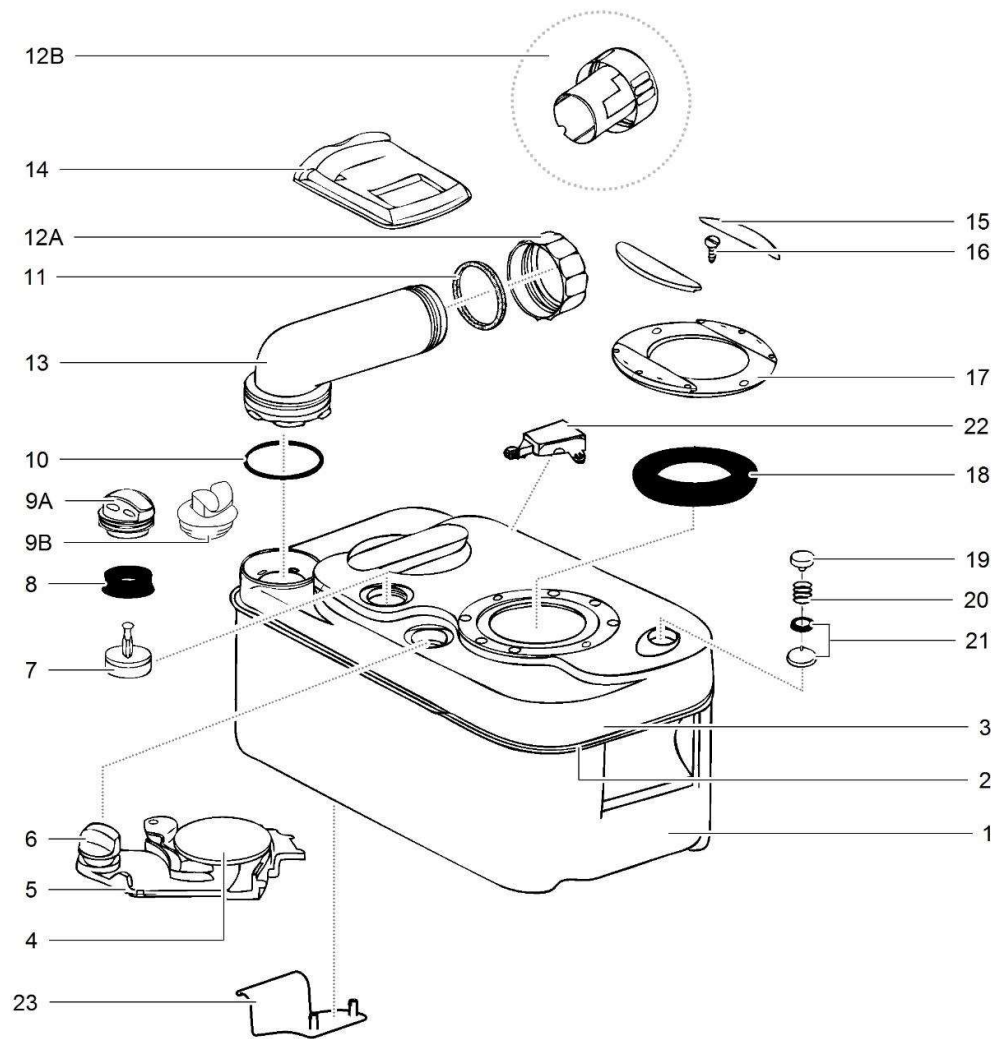

LE1159_C200-Waste-holding Tank_1114-V03

		Spare part number	Spare part number	Spare part number	Colours available
1	Waste-holding tank lower				
2	Weld waste-holding tank				
3	Waste-holding tank upper				
4	Blade	23847			
5	Blade arm				
6	Blade opener	23743			78
7	Foam		23722		74
8	Seal automatic vent	21528			
9A	Upper automatic vent				
9B	Upper automatic vent outside vent			23788 <i>for outside vent version</i>	74
10	O-ring	16195			
11	Cap seal		16384		
12	Dump cap			16196	74, 78
12A	Measuring cup		25810		
13	Pour out spout				
14	Sliding cover	21333			74
15	Screw cover				
16	Screw				
17	Seal cover				
18	Lip seal	23721			
19	Vent button		07524		78
20	Spring				
21	Seal retainer				
22	Floatarm	23726			
23	Tank lock clip	23849			78
	Waste-holding tank complete	Refer to page 26			